

4-20 mA MODULE

MODEL # MOD-420



The 4-20 mA module comes with both a male and female IEP connection (Infinite Expandability Port). To initiate the module simply plug the male plug into the IEP on the controller, or into any other BLACKCOMB module that contains an IEP (sensor, remote alarm, solenoid module, etc.)

The 4-20 mA module must only be supplied at SELV. Disconnect power supply before servicing.

Connect "LOOP" Connections as follows:

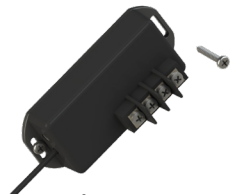
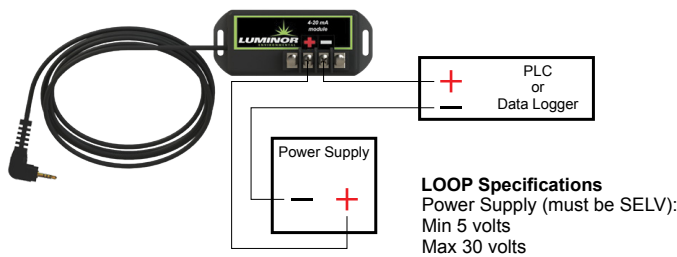


Figure 1

Secure module to wall with screws



Figure 2

IEP connection